

## Operating your Multi-Color Wireless RF Key Fob Remote

The LOCK button (upper left) is used to select a desired effect. There are 7 different effects you can select by simply pressing the button. Within each of these settings, the UNLOCK (upper right) and LIGHTNING BOLT (bottom left) control speed, color and/or brightness of the effect. The BELL button (bottom right) always turns your lights off.

- Press the LOCK button once to turn ON the first color. In this “on” mode you can change the displayed color by pressing the UNLOCK button.

You can also dim the LEDs by pressing the LIGHTNING BOLT. After five clicks, it will revert to the brightest setting.



- Press the LOCK button a second time to make a selected color FLASH. Press the UNLOCK button to change colors and the LIGHTNING BOLT to control speed of the flashing. Each press of the LIGHTNING BOLT will slow the flash.

- Press the LOCK button a third time to SWITCH COLORS AUTOMATICALLY. In this mode the LIGHTNING BOLT controls the speed of the switch and the UNLOCK button the brightness. The LEDs will dim with each press of the UNLOCK, resetting to full brightness on the fifth click.

- Pressing the LOCK button a fourth time activates BREATHING MODE. This mode cause the LEDs the simultaneously brighten and dim, as if they were breathing. They automatically change colors with each “breath.” In this mode, the LIGHTNING BOLT controls speed and UNLOCK is inactive.

- The fifth time you press the LOCK button you’ll activate STROBE MODE. The LIGHTNING BOLT will change the pattern of the strobe and UNLOCK will change the color.

- On the sixth press of the LOCK button you’ll enter COLOR CHANGING STROBE MODE. The LIGHTNING BOLT changes the strobe pattern and UNLOCK is inactive.

- Pressing the LOCK button a seventh time activates COLOR BLENDING MODE. The colors continuously change in this mode. Control the speed of blending with UNLOCK.