The Dual Zone M7 RF Remote Control

FIRST USE

The Dual Zone M7 RF remote control is easy to use. It comes already paired to the controller. Make sure to install the included 12vdc, A27 alkaline battery.



REPLACING THE BATTERY

The Dual Zone M7 remote uses one 12vdc, A27 alkaline battery. To remove the battery, turn the remote over. At the base of the remote you'll see a small door that pops open. Simply install a new battery and close the door. Make sure the negative (-) side of the battery is on the left and the positive (+) is on the right.



HOW TO PAIR THE REMOTE TO CONTROLLER

Typically the remote and the controller will stayed paired. If however you accidentally press the 'pairing' button on the controller while it's powered on, you will delete the pairing and have to pair your Dual Zone M7 remote to the controller. There might also be a situation where you want to add a second remote and you'll need to pair the new remote to the controller. Pairing the Dual Zone M7 remote to the controller is simple.

Step 1: Power up the controller. You can tell if the controller has power when the green power light is on.

Step 2: Quickly press the pairing button on the controller box and release. Do not hold down. When in pairing mode, the green power light will flash.

Step 3: With the controller in pairing mode, press and release any button on the Dual Zone M7 remote. As soon as you do this, the green flashing light on the controller should turn solid green. This means the Dual Zone M7 remote and the controller are now paired.

If you wish to pair a second Dual Zone M7 remote, repeat the pairing process.



The green power light will flash when in pairing mode.

USING THE REMOTE



POWER ON/OFF: The top left RED button is the power button. It turns the lights on and off. **ALL ZONES:** Controls both Zone 1 and Zone 2 simultaneously. Pressing the 'ALL ZONES' button will also turn on the entire system to bright white.

ZONE 1: Individually operates all LED strips attached to Zone 1 of your controller. Pressing the 'ZONE 1' button will turn Zone 1 on to bright white.

ZONE 2: Individually operates all LED strips attached to Zone 2 of your controller. Pressing the 'ZONE 2' button will turn Zone 2 on to bright white.

COLOR: Press the + or - signs to change colors.

BRIGHTNESS: Press the + or - signs to increase or decrease brightness of your lights. **MODE**: Press the + or - signs to change the mode. Steady on, strobing, switching, breathing and blending.

SPEED: Press the + or - signs to increase or decrease the speed of the feature.



7505 Sussex Drive Suite 114, Florence, KY, 41042 www.boogeylights.com Phone: 800.847.1359

[BLDZM7INFO020119]