
BLOOMER TRAILER SETUP

On most horse trailers, you can add additional LED strips to the center cross bars which is what we did for this installation. For simplicity sake, this diagram does not show those additional LED strips in the middle.

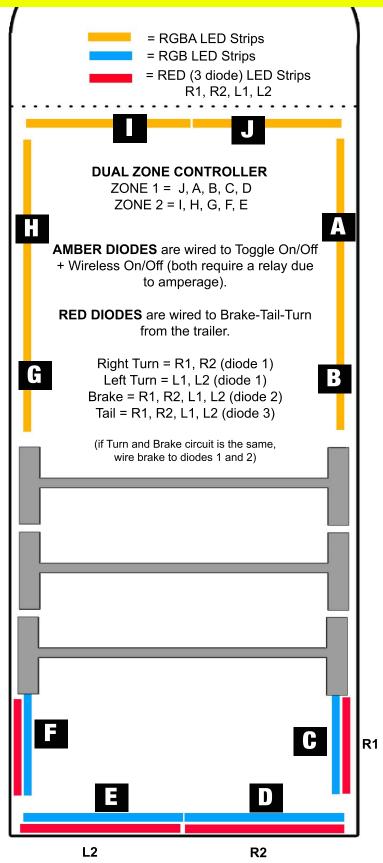

NOTE: If you're going to add tail-turn-brake integration, adding LEDs to your trailer may exceed your tow vehicle's rated amperage for that lighting circuit and throw an error. The lighting control module (LCM) 'thinks' there is a problem with your electrical system due to the increase in amperage. The easiest work around is to add an independent relay (3 or 4 relays depending on how your tow vehicle is setup) to make them work. The relays draw milliamps and won't cause the LCM to error out.

L1